
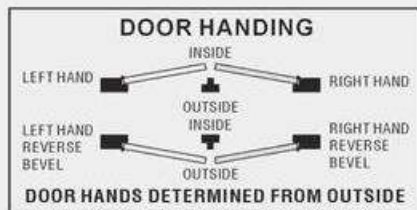



# HOW TO INSTALL THIS CYLINDRICAL LEVERSET

Leverset is set for 1 3/4" thick door -backset 2 3/4"

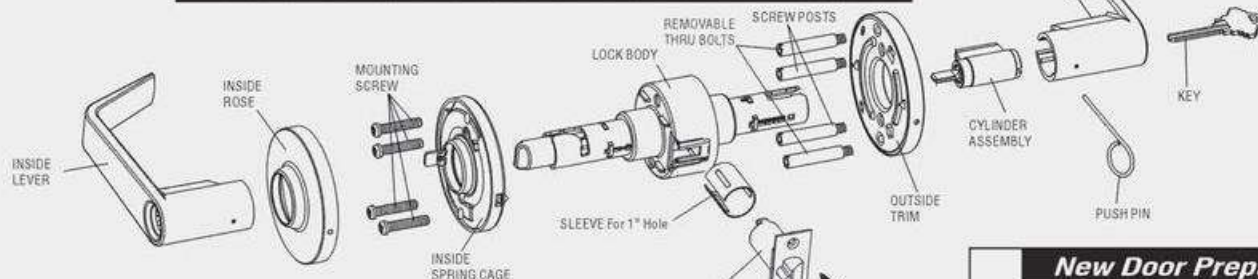


## New Door Preparation

1. Fold template over edge of door and mark holes.
2. Drill a 2-1/8" hole.
3. Drill two 3/8" thru bolt holes through face of door (only if the thru bolts are being used).
4. Drill a 1" hole in edge of door.
5. Cut 5/32" notches on 2-1/8" hole on both sides of door. (very important if not using thru bolts)
6. Mortise latch unit front 2-1/4" x 1-1/8" x 1/8" for 2-3/4" backset or 2-1/4" x 1" x 1/8" for the optional 2-3/8" backset

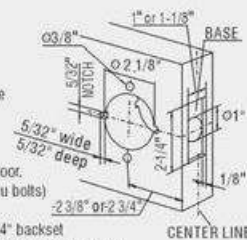


## 1 DISASSEMBLE INSIDE LEVER

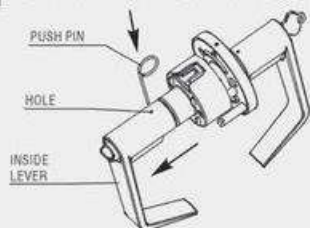


**1A:** Insert push pin into hole to depress catch and remove the lever.


## 2 INSTALL LEVERSET TO DOOR

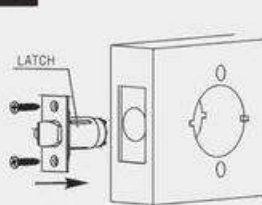

**2A:** Insert latchbolt and secure with combination screws.

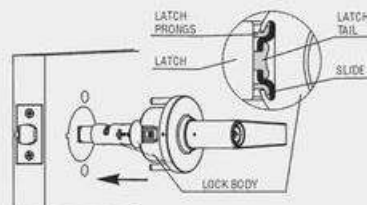

**2B:** Place lock body into position. Make sure that latch prongs engage chassis in housing, and slide engages latch tail.

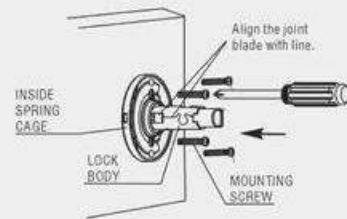

**2C:** Install inside spring cage. Screws should be hand tightened all the way down with a screwdriver.